OPERATING MANUAL

STL50Ex

Safety temperature limiter

Approved in accordance with:

EN 14597

EN 61508, SIL2

EN ISO 13849-1, PL d






Table of contents

1	Intended use (areas of application)4		
1.1	Safety signs and symbols		
1.2	Safety ir	structions5	
1.3	Product liability and warranty		
1.4	Approvals		
2	Product	description	
2.1	Scope of	f delivery7	
2.2	Features	57	
2.3	Brief inf	ormation	
2.4	Dimensi	ons 8	
2.5	2.5 Connection diagrams		
2.6	Electrica	al installation10	
3	Controls	s and functional description11	
3.1	Operatir	ng and display elements11	
3.2	Operation11		
3.3	Operating level		
3.4	Configuration level		
3.5	Error messages		
3.6	Functior	nal safety21	
	3.6.1	Safe state	
		Temperature probe	
	3.6.3	In case of faults and errors21	
3.7	Functior	nal test	
3.8	Approved temperature probes24		
4	Technic	al data25	
4.1	Ordering	g code	

STL50E	- Safety temperature limiter	Table of contents
5	Device transport and storage	
6	Return to manufacturer	
7	Disposal	
8	Notes	
9	EU-Declaration of conformity	

Intended use (areas of application) 1

Note

Refer to the chapter 'Product description' for detailed specifications for the area of application.

The operational safety of the device is only assured when used as intended in accordance with the specifications in the operating manual.

Intervention beyond the actions described in the operating manual may only be carried out by personnel authorised by the manufacturer for safety and warranty reasons. Conversions or modifications made on one's own authority are expressly prohibited.



Attention!

Application-specific dangers can emanate from this device when used improperly or not as intended. The device is intended for operation in safety-relevant systems up to SIL2.

The device is not suitable for use in explosion-prone areas.

General safety instructions, use

This operating manual must be kept in a location such that qualified personnel can refer to it at all times.

Any processes described in this operating manual may only be carried out by trained, qualified personnel who are authorised by the owner and wearing protective clothing. All rights reserved.

Safety signs and symbols 1.1

Warning notices are identified in this document as described below:



This symbol warns of imminent danger which can result in death, severe bodily injury, or severe property damage in case of non-observance.

Attention

This symbol warns of potential dangers or harmful situations which can cause damage to the device or to the environment in case of non-observance.

Note

Blue underlying indicates processes which can have a direct influence on operation or can trigger an unforeseen reaction in case of non-observance.

Warning!

Warning! of an area in which explosive atmospheres can form. This only applies to devices with ATEX approval.

1.2 Safety instructions

Read the product description before commissioning the device. Ensure that there are no limitations for use of the product for the relevant applications.

\Lambda Danger!

The owner is responsible for ensuring the fault-free operation of the device. The owner is obligated to ensure compliance and to observe the required work and safety measures of the current applicable regulations for the entire duration of use.

1.3 Product liability and warranty

Exclusion of liability:

The contents of the operating manual have been checked to ensure conformity with the described device. However, deviations cannot be entirely ruled out. Therefore, we cannot assume any guarantee for complete conformity. The specifications in this document are checked regularly and any necessary corrections are incorporated into subsequent versions. This document is subject to technical changes. In addition, all claims are based on the valid 'Standard Terms for the Supply of Products and Services of the Electrical Industry'.

Attention!

Senseca cannot inspect or repair any devices without the required form having been filled in completely (see chapter 6 Return to manufacturer, page 29).

1.4 Approvals

EN 14597	Temperature control devices and temperature limiters for heat generating systems
EN 61508, SIL2	Functional safety of electrical/electronic/programmable
EN ISO 13849-1	Safety of machinery — Safety-related parts of control systems — Part 1: General principles for design electronic safety-related systems

2 Product description

The STL50Ex safety temperature limiter is used wherever thermal processes must be monitored and the system must be switched to a safe operating state in case of a fault. If the permissible temperature limit value is reached or an error occurs in the monitoring device (probe break, probe short-circuit, failure of a component in the device, error in the software, failure or impermissible value of the supply voltage, etc.) within the permissible temperature range, the STL50Ex switches off immediately. The alarm contact is confirmed, the front-side ALARM LED and the background lighting of the display illuminate, and the cause of error is shown on the display in plain text.

A 24 V DC signal for an external alarm is also connected to terminals 17-18.

2.1 Scope of delivery

- Safety temperature limiter STL50Ex with packaging
- This operating manual

2.2 Features

- Can be used as
 - **STB** Safety temperature limiter
 - ASTB Exhaust gas safety temperature limiter
 - STW Safety temperature monitor
- Certified according to EN 61508 SIL2
- Input intrinsically safe acc. to
 - 👷

II (1) G [Ex ia Ga] IIC/IIB

💢 🛛 II (1) D [Ex ia Da] IIIC

Certificate No. TÜV 07 ATEX 554295

- Pt100 input, 3-wire connection or double thermocouple J, K, N and S
- Programmable temperature limit value and switching hysteresis
- Basic accuracy <0.5 %, ±2 digit
- Reaction time ≤ 0,5 s
- Alarm output 1 relay, SPDT
- Pre-alarm output 1 relay, SPDT
- Analog output 0/4 ... 20 mA, 0/2 ... 10 V
- Memory function for error message
- Operator lockout (password-protected)
- Case for TH35 DIN rail mounting


2.3 Brief information


Programming	The device is programmed with the buttons on the front side in combination with the graphic display.
Operating modes	The device can be used as:
STB→	Maximum or minimum monitoring with catch Manual reset after fault elimination by pressing the button on the front side or an externally connected button
ASTB→	like before, but with exhaust temperature monitoring
STW→	Maximum or minimum monitoring without catch. Automatic reset after return to the permissible range.
Switching hysteresis	always acts towards a safe range.
Error buffer	Maximum or minimum monitoring without catch. Automatic reset after return to the permissible range.



With use of the device in accordance with EN 14597, temperature sensors that are approved in accordance with EN 14597 must be used!

2.4 Dimensions

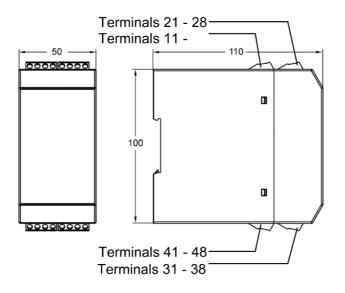

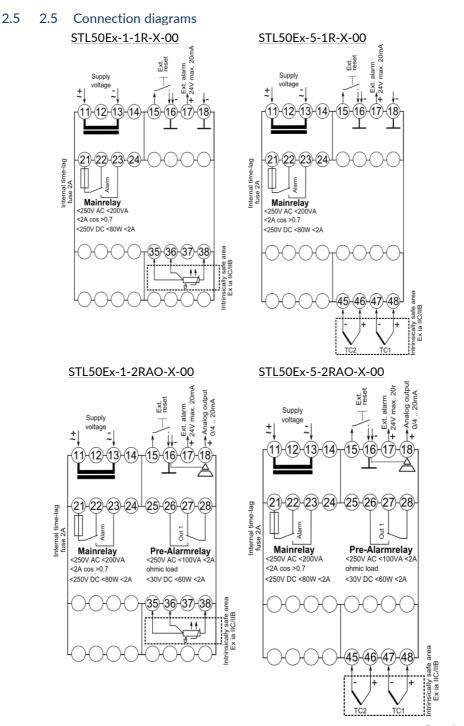

2.6 Electrical installation

Danger!

The device may only be installed by an electrician. Compliance with the national and international regulations for installation of electrical and electronic systems applicable in the respective country of use is mandatory.

Note Pt100 input:

The resistance of 4 Ω per line must not be exceeded.

The corresponding line length for copper cable is specified in the table.

The values must be calculated for other line materials and cross-sections.

Maximum line length for copper lines

Line cross-section	Maximum line length
0,14 mm²	32 m
0,25 mm²	58 m
0,5 mm²	116 m
0,75 mm²	174 m
1 mm ²	232 m
1,5 mm²	348 m

3 Controls and functional description

3.1 Operating and display elements

Input
Operation mode
Actual value
Ajdusted limit value
Power-ON LED
Parameter button
up/down adjusting keys
Main relay LED (safety-related)
Pre-alarm relay LED
Reset button



3.2 Operation

The device is operated on 2 levels. The desired parameter is opened with the \bigcirc button.

Selection within a parameter or adjustment of a value takes place

with the \blacktriangle and \checkmark buttons.

Button combinations (press buttons simultaneously):

 \bigcirc + \bigcirc parameter is set to "0" or minimum value.

The device initialises after the supply voltage is connected. The device type and software version appear in the display. After the device is finished initialising, it enters the operating level and the current temperature and all safety-related settings are displayed. The peak value buffer is displayed by briefly pressing the \bigcirc button.

The configuration level is displayed by pressing and holding the \bigcirc button for 2 seconds. All parameters determining the properties of the device are programmed here. A password must be entered in order to enter the safety area of the configuration level. If an incorrect password is entered, an error message appears in the display. The device switches back to the operating level after this message or if no password is entered. After an incorrect password has been entered three times, the device enters a safety timeout for 60 minutes. The progress of this safety timeout is shown in the display. The safety area is accessible with entry of the correct password. Settings can be made here, which must be protected from unauthorised change. After the last menu item or if no button is pressed for more than 2 minutes, the devices switches back to operating level automatically and the current measurement is shown in the display. The configuration level can be exited at any times by pressing the \bigcirc button for 2 seconds.

Note: Error messages

If errors occur, the messages are shown in clear text on the display. This simplifies troubleshooting.

Note: Note for commissioning

The device has standard preconfigured factory settings. Therefore, it must be adapted to the specific application.

Note: Service

Service of the device is only possible in the factory. Please refer to chapter 6 Return to manufacturer on page 29.


Note: Requirements

- It is necessary to keep the conditions of the ATEX EC-Type Examination Certificate.
- The device must be installed in dry and good monitored rooms.
- If the intrinsinc safety input is connected to the dust endangered area of zone 20 or 21, it has to be ensured that the corresponding devices in this circuit have the requirements of category 1D or 2D.
- Repairing and design modifications are only allowed at works.

3.3 Operating level

Note

Only the resetting of the peak value buffer is possible on the working level.

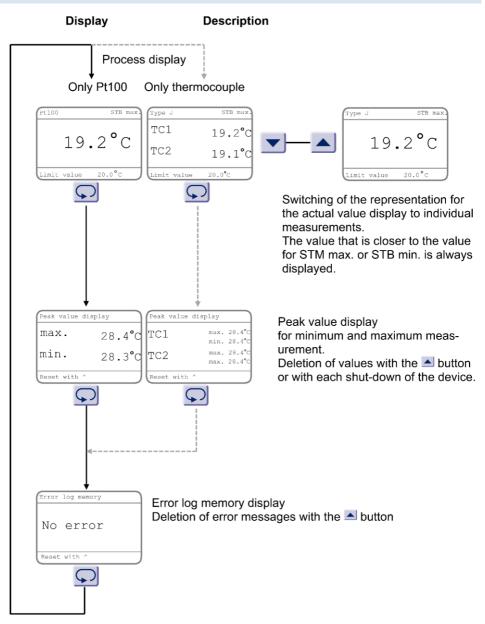

Note for the display




Parameter only appears with appropriate configuration

Parameter only appears with appropriate device version

3.4 Configuration level






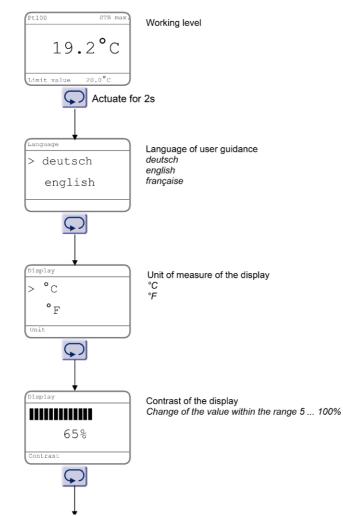

Display	Description (entered values are factory settings)
Enter password	Entry of the password for the security level (0010 in condition as delivered)
0000	(i)After an incorrect password has been entered three times, the device enters a safety timeout for 60 minutes. With the setting 0000 and active password protection, a jump to the working level takes place.
C	
Security area	
Change password ! 0010 !	Change the password Change the value within the range 0000 9999
Please note	(1) Attention: Write down the password. Resetting to 0010 can only take place in the factory
Input > Type J Type K Thermocouple 2x type J	InputType JDouble thermocouple Fe-CuNiType KDouble thermocouple NiCr-NiType NDouble thermocouple NiCrSi-NiSiType SDouble thermocouple Pt10Rh-Pt
nisplay without > with decimal place	Decimal place (only for Pt100 input and double thermocouple type J) without no decimal place with one decimal place
Sensor correction 0.0°C	Measurement correction Change of the value in the range -10°C (-10.0°C) 10°C (10.0°C)



Description (entered values are factory settings)

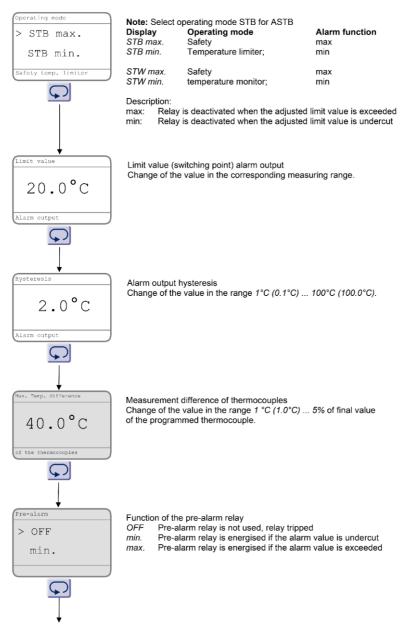

Display

20.0°C

.

2.0°C


Limit value

pre alarm

Hysteresis

pre alarm

> OFF 0..20




Alarm value (switching point) of the pre-alarm relay Change of the value in the corresponding measuring range.

Pre-alarm relay hysteresis Change of the value in the range $1^{\circ}C$ (0.1°C) ... 100°C (100.0°C).


Function of the analog output

anoton of the undieg cutout		
OFF	Analog output is switched off	
020	Analog output 0-20mA and/or 0-10V	
420	Analog output 4-20mA and/or 2-10V	
020/22	Analog output 0-20mA and/or 0-10V, in case of error 22mA/11V	
420/22	Analog output 4-20mA and/or 2-10V, in case of error 22mA/11V	
3.6/420	Analog output 4-20mA and/or 2-10V, in case of error 3.6mA/1.8V	

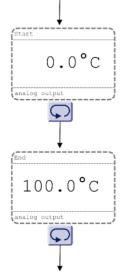


Start value of the analog output Change of the value in the range -200°C (-200.0°C) ... 2000°C (2000.0°C).

End value of the analog output Change of the value in the range 200°C (-2000.0°C) ... 2000°C (2000.0°C).

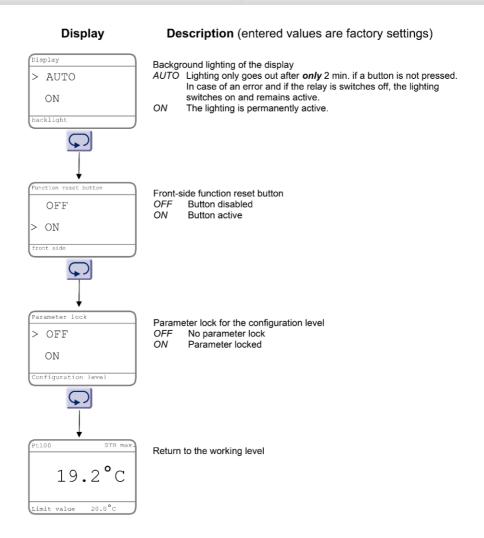

3.5 Error messages

Display	Description
Caution! Suppl. Voltage too	The supply voltage does not reach the value that is required for the device to function safely.
low! Please check	
Caution! Parameter	The parameter cannot be changed, because the parameter lock is activated for the configuration level.
locked	
Caution! Incorrect	An incorrect password was entered for the security area. The dis- play returns to password entry after 3 seconds.
password	
1. failed attempt Sequence	After an incorrect password has been entered three times, the device enters a safety timeout for
49min 30s	60 minutes.
Safety time	
Thermocouples Broken	A cable interruption is detected at the connection terminals to the thermocouples. Check connection of the thermocouples.
line Please check	
Thermocouples	The measurement exceeds the maximum temperature for
Measured val.	the selected thermocouple.
> XXX°C	
Please check	
Thermocouples Measured val.	The measurement undercuts the minimum temperature for the thermocouple.
< XXX°C	
Please check	
Pt100	A short circuit was detected at the terminals of the Pt100.
Short	Check connection lines and Pt100 probes.
circuit	
Please check	

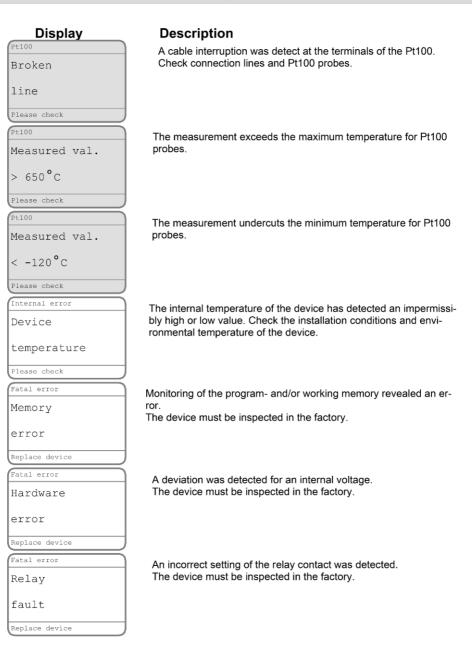

3.6 Functional safety

The STL50Ex safety temperature limiter was developed according to the specifications of the IEC 61508. This standard describes the functional safety of safety-related programmable electrical and electronic systems.

The devices is a Class B subsystem with the SIL2 requirement (single-channel). The safety function of the device relates to the detection and evaluation of the temperature and the resulting mandatory contact position of the installed relay.

3.6.1 Safe state

The safe state of the device is only provided when the relay is in idle position (closed current principle). If the internal diagnostic system recognises an error, the relay switches to idle position. Therefore, a normally-open contact can be used for integration of the relay changeover into the monitoring device.

3.6.2 Temperature probe

Connected temperature probes are monitored for cable breaks or short-circuits. With thermocouples, this is only physically possible for double thermocouples. It is not permissible to use simple thermocouples and connect the inputs in parallel with jumpers. If separate probe fittings are used, they must be installed next to each other so that they both detect the same temperature.

3.6.3 In case of faults and errors

If a fault occurs in the system, the cause must be rectified immediately. If the STL50Ex safety temperature limiter is decommissioned for this purpose, the process must be safeguarded in another manner. If there is a device error, we request that you send the device to the factory with a brief description of the error.

STL50Ex safety indicators for functional safety		
Safety-related output signal	Relay output	
Test standard	EN 61508	
Inspection authority	TÜV NORD CERT GmbH	
SIL	2	
System	Тур В	

STL50Ex safety indicators for functional safety			
		Inp	out
		Pt100	Thermocouple
λSD	(rate of detected harmless failures)	1740 FIT	1740 FIT
λSU	(rate of undetected harmless failures)	601 FIT	542 FIT
λDD	(rate of detected dangerous failures)	741 FIT	742 FIT
λDU	(rate of undetected dangerous failures)	127 FIT	105 FIT
		(1 FIT = 1 failure / 10 ⁹ h)	
Number of harmless failures (SFF)		96 %	97 %
Average probability of failure (PFD _{avg})		3.80 x 10 ⁻³	2.80 x 10 ⁻³
Probability of failure per hour (PFH)		1.27 x 10 ⁻⁷	1.05 x 10 ⁻⁷
Duration of use of safety function		10 y	ears

3.7 Functional test

With operation of the device at a higher demand rate, e.g. with process-related frequent activation of the device, additional functional testing can be omitted in accordance with IEC 61508. This also applies for op-eration with a low requirement rate, i.e. infrequent activation of the device due to process conditions. The probability of failure is very low for a service life of 10 years according to SIL2 (see table on page 19).

The temperature probe is replicated with a simulator for a functional test. The inputs can be connected in parallel for thermocouples.

The test begins with a check of the temperature monitoring. The relay must be active in the good range.

Then a check:

- takes place to determine whether the temperature on the display of the STL50Ex matches the temperature of the simulator for each test step
- the alarm function when the good temperature range is violated
- the alarm function in case of a probe break (each cable separately) and probe shortcircuit.

Correct alarm function of the STL50Ex is provided if

- the relay is deactivated and the contact switches to rest position,
- the error is shown correctly in plain text on the display,
- the LED alarm on the front of the STL50Ex illuminates,
- a voltage of 24 V DC is connected to the appropriate terminals for an external alarm.

After the simulator changes the temperature back to the good range, the STL50Ex functions correctly if

- the relay is reactivated, in safety temperature limiter operating mode,
- the relay is not activated until the front RESET button or an external RESET button having been pressed,
- then the display shows the normal operating data,
- the LED alarm on the front of the STL50Ex goes out,
- and voltage is no longer connected to the terminals of the external alarm.

In safety temperature limiter operating mode,

- the relay is activated without the front RESET button or an external RESET button having been pressed,
- the display shows the normal operating data,
- the LED alarm on the front of the STL50Ex goes out,
- and voltage is no longer connected to terminals 17 and 18.

Danger!


If the relay is not deactivated during one of the test steps or temperature and/or causes of error are not displayed correctly, the STL50Ex must be sent to the factory for inspection. In the meantime, the system must be kept in a safe state by other means.

Special notices!

- The STL50Ex safety temperature limiter must be installed in a switch cabinet with a protection rating of at least IP40.
- Strain relief for the connecting cable(s) of the temperature sensor must be provided.
- As protection for the internal device fuse of the STL50Ex, securing the monitoring current circuit with an external fuse (maximum 1.6 A, medium time lag) is recommended. If the internal fuse is tripped, the device must be sent to the factory for service!

3.8 Approved temperature probes

Pt100	Safety temperature probe TR293; TR296
Thermocouple	Safety temperature probe TC293; TC296

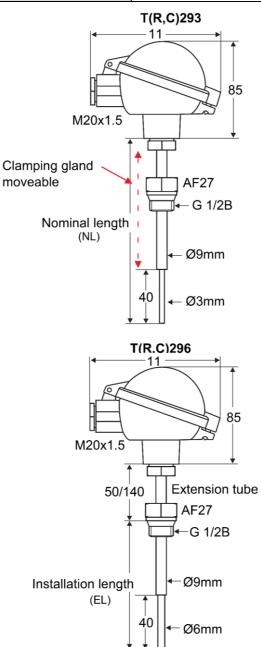

4 Technical data

Auxiliary energy	
Supply voltage	230 V AC ±10 %, 115 V AC ±10 %, oder 24 V DC ±15 %
Power consumption	< 4 VA
Rated voltage	250 V AC, between input / relay output / supply voltage Degree of contamination 2, overvoltage category III
Test voltage	4 kV= between input/relay output/supply voltage
Conformity	CE
Environmental Conditions	
Environmental temperature	-10+55 °C
Transport and storage conditions	-30+60 °C
Relative air humidity	< 95 %
Condensation	not permitted
Vibrations	Use in low-vibration environments only!
The EC-Type Exam	ination Certificate is posted @ www.senseca.com
Approval for	
EN 14597	Temperature control devices and temperature limiters for heat generating systems
EN 61508	SIL2
EN ISO 13849-1	PL = d (Categorie 2, MTTFd = high)
Input	
Input	 ⟨Ex) II (1) G [Ex ia Ga] IIC/IIB ⟨Ex) II (1) D [Ex ia Da] IIIC
Explosion protection	TÜV 07 ATEX 554295
Pt100	in the range -100.0 600.0 °C or -100 600 °C 3-wire connection, maximum resistance 4 Ω per wire Probe current <1 mA (no independent heating)
Data in case of an error	
max. voltage (no load) U_0	1.4 V

max. short circuit current I_0	6 mA		
max. power consumption P_0	7 mW		
min. internal resistance R	1.6 kΩ (characteristic curve trapezoidal)		
	Ex	la/IIB	la/IIC
max. external capacity		110 μF	28 μF
max. external inductivity		100 mH	20 mH
internal capacity	negligible		
internal inductivity	negligible		
Thermocouple			
Тур Ј	Fe-CuNi range -100.0 800.0 °C or -100 800 °C		
Тур К	NiCr-Ni range -150	1200 °C	
Typ N	NiCrSi-NiSi range -150 1200 °C		
Typ S	Pt10Rh-Pt range 0 1600 °C		
Data in case of an error			
max. voltage (no load) U_0	0.7 V		
max. short circuit current I ₀	2 mA		
max. power consumption P_0	1.5 mW		
min. internal resistance R	5 kΩ (characteristic curve trapezoidal		
	Ex	la/IIB	la/IIC
max. external capacity		240 μF	54 μF
max. external inductivity		100 mH	50 mH
internal capacity	negligible		
internal inductivity	negligible		
Basic accuracy	±0.5 %, ±2 digits		
Temperature coefficient	0.01 %/K		
Display	Graphic LCD with 128 x 64 pixels with white backlighting		

Outputs	
Main relay (safety-related)	Changeover contact <250 V AC <200 VA <2 A cosv ≥0,7; <250 V DC <80 W <2 A, internally safeguarded with 2 A slow-burning fuse
Pre-alarm relay	Changeover contact <250 V AC <100 VA <2 A ohmic load; <30 V DC <60 W <2 A,
Analog output	0/4 20 mA burden ≤500 Ω; 0/2 10 V burden > 500 Ω, galvanically isolated, Output switches automatically (load-dependent)
Accuracy (analog output)	0.4 % TK: 0.01 %/K
Gehäuse	
Material	Polyamide (PA) 6.6, UL94V-0 Carrier rail mounting TS35
Gewicht	approx. 450 g
Elektrischer Anschluss	Screw terminals 0.14 2.5 mm ² (AWG 26 14)
Schutzart	IP20, BGV A3

4.1 Ordering code

	1.	2.	3.	4
STL50Ex-				

1.			
	1	Pt100, 3- wire connection -100,0 600,0 °C/-100 600 °C	
	5	Thermocouples J (Fe-CuNi) -100,0 800,0 °C/-100 800 °C K (NiCr-Ni) -150 1200 °C N (NiCrSi-NiSi) -150 1200 °C S (Pt10Rh-Pt) 0 1600 °C	
2.			
	1R	1 Alarm output relay	
	2RAO	2 relay outputs + analog output	
3.			
	0	230 V AC ±10 % 50-60 Hz	
	1	115 V AC ±10 % 50-60 Hz	
	5	24 V DC ±15 %	
4.			
	00	No options	

5 Device transport and storage

Gentle and tension-free packaging of the housing must be ensured for transport (no machine wrapping of the package). The device must be stored in the environmental conditions specified in the technical data.

6 Return to manufacturer

🚺 Danger!

The legal regulations for environmental protection and our personnel require that devices which are sent back which have come into contact with liquid are handled with-out risk to people or the environment.

If you send a device back to us for inspection or repair, we must request that you strictly observe the following requirements:

On the Senseca homepage <u>www.senseca.com</u> a return shipment form can be downloaded.

The repair can be performed quickly and without call-back questions if:

- 1 a filled-in form is provided for each device,
- 2 the device has been cleaned and packaging which prevents damage to the device is used, and
- **3** a safety data sheet for the measuring medium is affixed to the outside of the package, if the device has come into contact with a critical substance.

7 Disposal



Separation by material and recycling of device components and packaging must take place when the device is disposed of. The valid legal regulations and directives applicable at the time must be observed. The device may not be

disposed of with household waste. If the device should be disposed of, return it to us with the return shipment form filled in under section 6. We will then arrange for the proper disposal.

8 Notes

Parameters	Factory setting	User setting
Language	deutsch	
Display unit	°C	
Contrast display	65 %	
Password	0010	
Input		
Decimal place	One	
Sensor correction	0.0 °C	
Operating mode	STB _{max}	
Limit value Alarm output	20 °C	
Hysteresis Alarm output	2 °C	
Max. Temperature difference of the thermocouples	40 °C	
Pre-alarm function	OFF	
Pre-alarm value	20 °C	
Pre-alarm hysteresis	2 °C	
Analog output function	OFF	
Analog output start value	0 °C	
Analog output end value	100 °C	
Backlight Display	AUTO	
Function reset button front side	ON	
Parameter lock for configuration level	OFF	

EU-Declaration of conformity 9



EU-KONFORMITÄTSERKLÄRUNG CF **EU-DECLARATION OF CONFORMITY**

Senseca | Senseca Germany GmbH | Tenter Weg 2-8 | 42897 Remscheid | GERMANY

Dokument-Nr. / Monat.Jahr: 2034 / 01.2024 Document-No. / Month Year

Wir erklären hiermit unter alleiniger Verantwortung, dass die folgenden Produkte konform sind mit den Schutzzielen der Richtlinie des Europäischen Parlaments: We declare herewith under our sole responsibility that the following products are in compliance with the protection requirements defined in the European Council directives:

Produktbezeichnung: Product identifier:

STL50Ex

Produktbeschreibung: Product description:

Sicherheits-Temperaturbegrenzer Safety Temperature Limiter

Die Produkte entsprechen den folgenden Europäischen Richtlinien: The products conforms to following European directives:

Richtlinien / Directives	S	
2014/30/EU	EMV-Richtlinie / EMC directive	
2014/34/EU	ATEX-Richtlinie / ATEX Directive	
2014/35/EU	Niederspannungsrichtlinie / Low Voltage Directive	
2011/65/EU	RoHS / RoHS	

Angewandte harmonisierte Normen oder angeführte technische Normen: Applied harmonized standards or mentioned technical specifications:

Harmonisierte Normen / h	armonized standards	
EN IEC 61326-1:2021	Allgemeine EMV-Anforderungen / General EMC requirements	
EN IEC 60079-0:2018	Allgemeine Anforderungen / General requirements	
EN 60079-11:2012	Geräteschutz durch Eigensicherheit / Protection by intrinsic safety	
EN IEC 60664-1:2020	Allgemeine Isolationsanforderungen /	
	General isolating requirements	
EN IEC 63000:2018	Beschränkung der gefährlichen Stoffe /	
	Restriction of hazardous substances	

EG-Baumusterprüfbescheinigung / ausgestellt von: TÜV 07 ATEX 554295 / TÜV Nord (Reg.No. 0044) EC Type Examination Certificate / issued by: DEKRA Testing and Certification GmbH (Reg.No. 0158) Qualitätssicherung / quality assurance:

Diese Erklärung wird verantwortlich für den Hersteller abgegeben durch: The manufacturer is responsible for the declaration released by:

Walter Vogelsberger Senior Director Research & Development

Remscheid, 02. Januar 2024

Diese Erklärung bescheinigt die Übereinstimmung mit den genannten Harmonisierungsrechtsvorschriften, beinhaltet jedoch keine Zusicherung von Eigenschaften This declaration certifies the agreement with the harmonization legislation mentioned, contained however no warranty

of characteristics.

senseca.com



Senseca Germany GmbH Tenter Weg 2-8 42897 Remscheid GERMANY INFO@SENSECA.COM

WEEE REG. NO. DE 93889386

