Delta OHM®

HD208
HD208PLUS

- [GB] Minidatalogger
  Temperature
  Temperature - Relative humidity

PART OF GHM GROUP

GREISINGER electronic · HONSBERG · Martens · IMTRON · TA TELEMETRIE & AUTOMATION

[GB]

[GB] HD208 – HD208PLUS
Minidatalogger
Temperature – Temperature/Relative humidity

- Temperature or temperature / relative humidity and dew point data logger
- Available models with fixed probe or probe with cable
- Manual, also with configurable delay time, or programmed (date and time) logging start
- Measurement alarms with configurable thresholds
- USB output
- Automatically generates PDF reports
- Software for configuration, monitor and data download supplied
- **PLUS** version available for compliance with **FDA 21 CFR part 11** recommendations
- LCD display and LED indicators for power, logging and alarms.
- Long life lithium battery
- Excellent weather protection

APPLICATIONS

- Monitoring of goods (food, drugs, plants, perishable products in general) during transport and storage
- Laboratories
- Museums and document archives

DESCRIPTION

The data loggers of the series **HD208** are compact instruments for monitoring temperature, relative humidity (RH) and dew point temperature. Usable in a wide spectrum of applications, are available in various models:

- With 1 channel for temperature only (depending on the model, the sensor can be internal, external fixed or external with cable).
- With 1 channel for temperature and relative humidity (combined probe fixed or with cable).
- With 2 channels for temperature only (one external sensor with cable and one internal sensor).
- With 2 channels: one for temperature and relative humidity (combined probe with cable) and one for temperature only (internal sensor).

All models can be supplied with or without LCD display.

The logging function is extremely versatile; logging can be started and stopped manually, by means of the front buttons, or the start and stop date and time of acqusition can be programmed. The delayed start capability allows starting the logging with a configurable delay time after pressing the button for the manual start.

For each quantity detected, two configurable alarm thresholds can alert the user if the measure exceeds the configured parameters.

The instrument automatically generates, after logging, a **PDF report** with charts of the variables collected. The PDF file can then be copied to the PC via the USB port, without any dedicated software: the instrument is recognized as a USB flash drive.

The application software **HD35AP-S** supplied with the instrument allows the configuration of the instrument, the real-time monitor of the measurements and the transfer of the acquired data into a database. The connection to the PC does not require any installation of USB drivers, thereby ensuring compatibility with all versions of the Windows® operating system.

The **PLUS** version allows the use of security features of the recorded data and configuration of the instrument in response to **FDA 21 CFR part 11** recommendations.

Powered by a 3.6 V **non rechargeable** lithium-thionyl chloride battery (Li-$SOCl_2$).

The sensors are pre-calibrated and require no further calibration by the user. If necessary, the user can perform a new calibration of the relative humidity sensor using the HD35AP-S application software.

All versions can be ACCREDIA certified, upon quote.

Power supply LED (POWER): briefly flashes every 10 seconds to indicate that the instrument is powered.

Logging LED (LOG): briefly flashes every 10 seconds during logging.

Alarm LED (ALARM): briefly flashes every 10 seconds if any of the measured quantities is in alarm.

START/MODE button: by pressing it briefly, you change the type of information displayed (measures, date/time, alarm thresholds, logging settings, free memory); if pressed for more than 2 seconds, manually starts logging. In models without LCD, the button performs only the START function.

STOP/Scroll button: by pressing it briefly, you change the parameter displayed (the parameter depends on the type of information selected with the START/MODE button); if pressed for more than 2 seconds, manually stops logging. In models without LCD, the button performs only the STOP function.

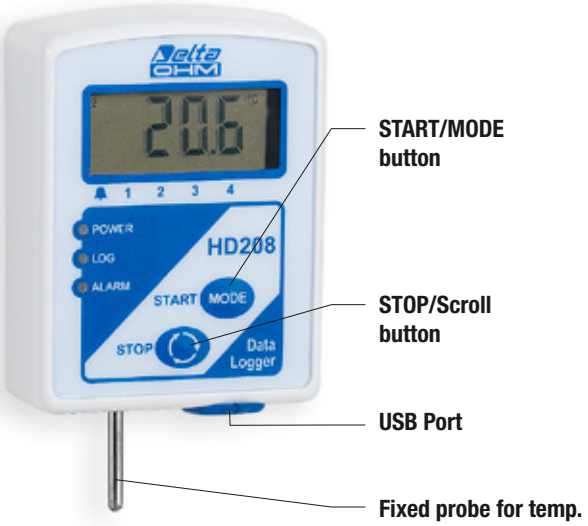

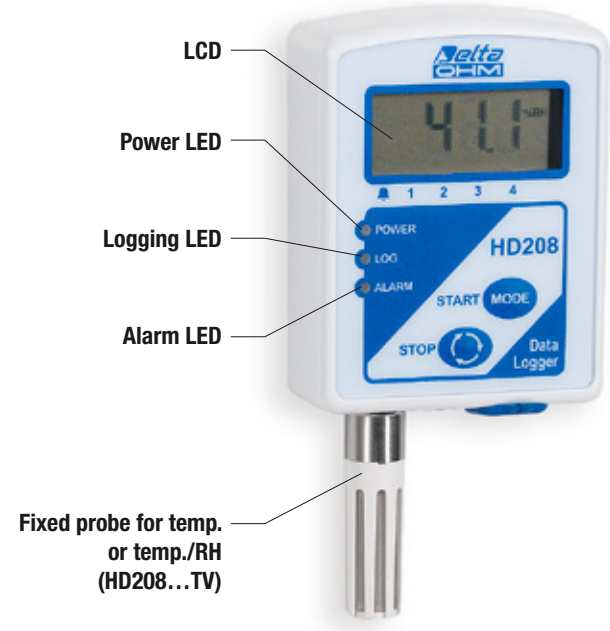

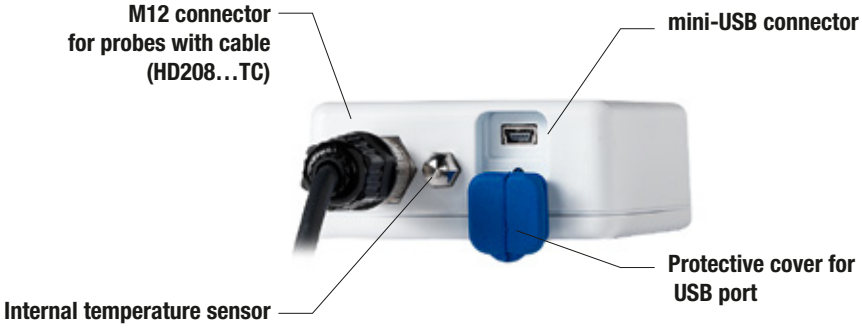

SPECIFICATIONS

Relative Humidity	
Sensor	Capacitive
Measuring range	0…100 %RH
Resolution	0.1%RH
Accuracy	± 1.5 %RH (5…90 %RH) / ± 2 %RH (remaining range) @ 23°C
Sensor operating temperature	-40…+80 °C standard / -40…+150 °C with the probe HP3517**E2**… for high temperature
Response time	T_{90} < 20 s (air speed 2 m/s, without filter)
Temperature drift	±2% over the whole operating temperature range
Stability	1% / year
Temperature	
Sensor	Pt1000 or NTC10kΩ @ 25 °C depending on the model
Measuring range	**NTC10kΩ**: -40…+105 °C **Pt1000**: -50…+200 °C The measuring range can be limited by the operating temperature of the probe used and, in the case of internal sensor or external fixed probe, by the maximum operating temperature of the instrument (+75 °C).
Resolution	0.1 °C
Accuracy	**NTC10kΩ**: ± 0.3 °C in the range 0…+70 °C / ± 0.4 °C outside **Pt1000**: class A, ± (0,15 + 0,002|t|) °C
Long term stability	0.1 °C / year
Unit of measurement	°C or °F
Logging interval	1, 2, 5, 10, 15, 30 s / 1, 2, 5, 10, 15, 30, 60 min
Storable quantities	According to the model: • Temperature: internal sensor, fixed external probe or external sensor with cable; Mean Kinetic Temperature (**MKT**) calculated; the models with two temperature channels (internal sensor and external probe with cable) store both temperatures. • Relative Humidity. • Dew Point. • Battery Voltage.
Memory	Circular management or stop logging when full. Number of samples (Ns) storable according to the number of stored (Ng) quantities: $Ns = \frac{921{,}600}{(1+0.75 \times Ng)}$ Example: > 526,000 with one quantity stored (Ng=1) > 147,000 with seven quantities stored (Ng=7)
Alarms	Two alarm thresholds (configurable) for each measured quantity
Power supply	3.6 V **not rechargeable** lithium-thionyl chloride internal battery (Li-$SOCl_2$), size AA, 2-pole Molex 5264 connector.
Battery life	2 years typical, with logging interval 30 s
PC connection	USB port with mini-USB connector
Temperature/ humidity of the instrument	-40…+75 °C / 0…100 %RH non condensing
Material	LURAN® S 777K
Dimensions	Case: 70 x 90 x 30 mm Size of the TV model with fixed probe: 70 x 138 x 30 mm
Prection degree	IP 64
Weight	150 g approx.
Installation	Wall mount

HD208 fixed probe Ø 4.5x25mm

HD208 with internal NTC sensor

MODELS WITH LCD

In models with LCD, **MODE** and **SCROLL** buttons allow viewing a variety of information. With the MODE button (short press) you choose the type of information: measurements, date and time of the instrument, alarm thresholds, start and stop instants of programmed logging, delay time for the manual start of logging, percentage of free memory. With the SCROLL button (short press) you navigate through the various fields of the type of information selected (see function diagram shown below). The buttons operation is cyclical.

If you press the SCROLL button when the display shows the last of the quantities available on the display, the instrument does not return immediately to the first quantity, but starts to automatically cycle through all the available quantities. Press SCROLL again to return to the permanent display of the first quantity.

If a parameter is not set, the instrument will display dashes.

Alarm symbols on display

In addition to the alarm LEDs, there are four alarm indications on the display; an arrow lights up in correspondence of the alarms 1, 2, 3 and 4 if:

- Alarm **1**: the temperature is below the lower threshold configured.
- Alarm **2**: the temperature is above the upper threshold configured.
- Alarm **3**: the relative humidity is below the lower threshold configured.
- Alarm **4**: the relative humidity is above the upper threshold configured.

If the model measures two temperatures: external sensor (channel 1) and internal sensor (channel 2), alarms 1 and 2 refer to the temperature measured by the external sensor (channel 1).

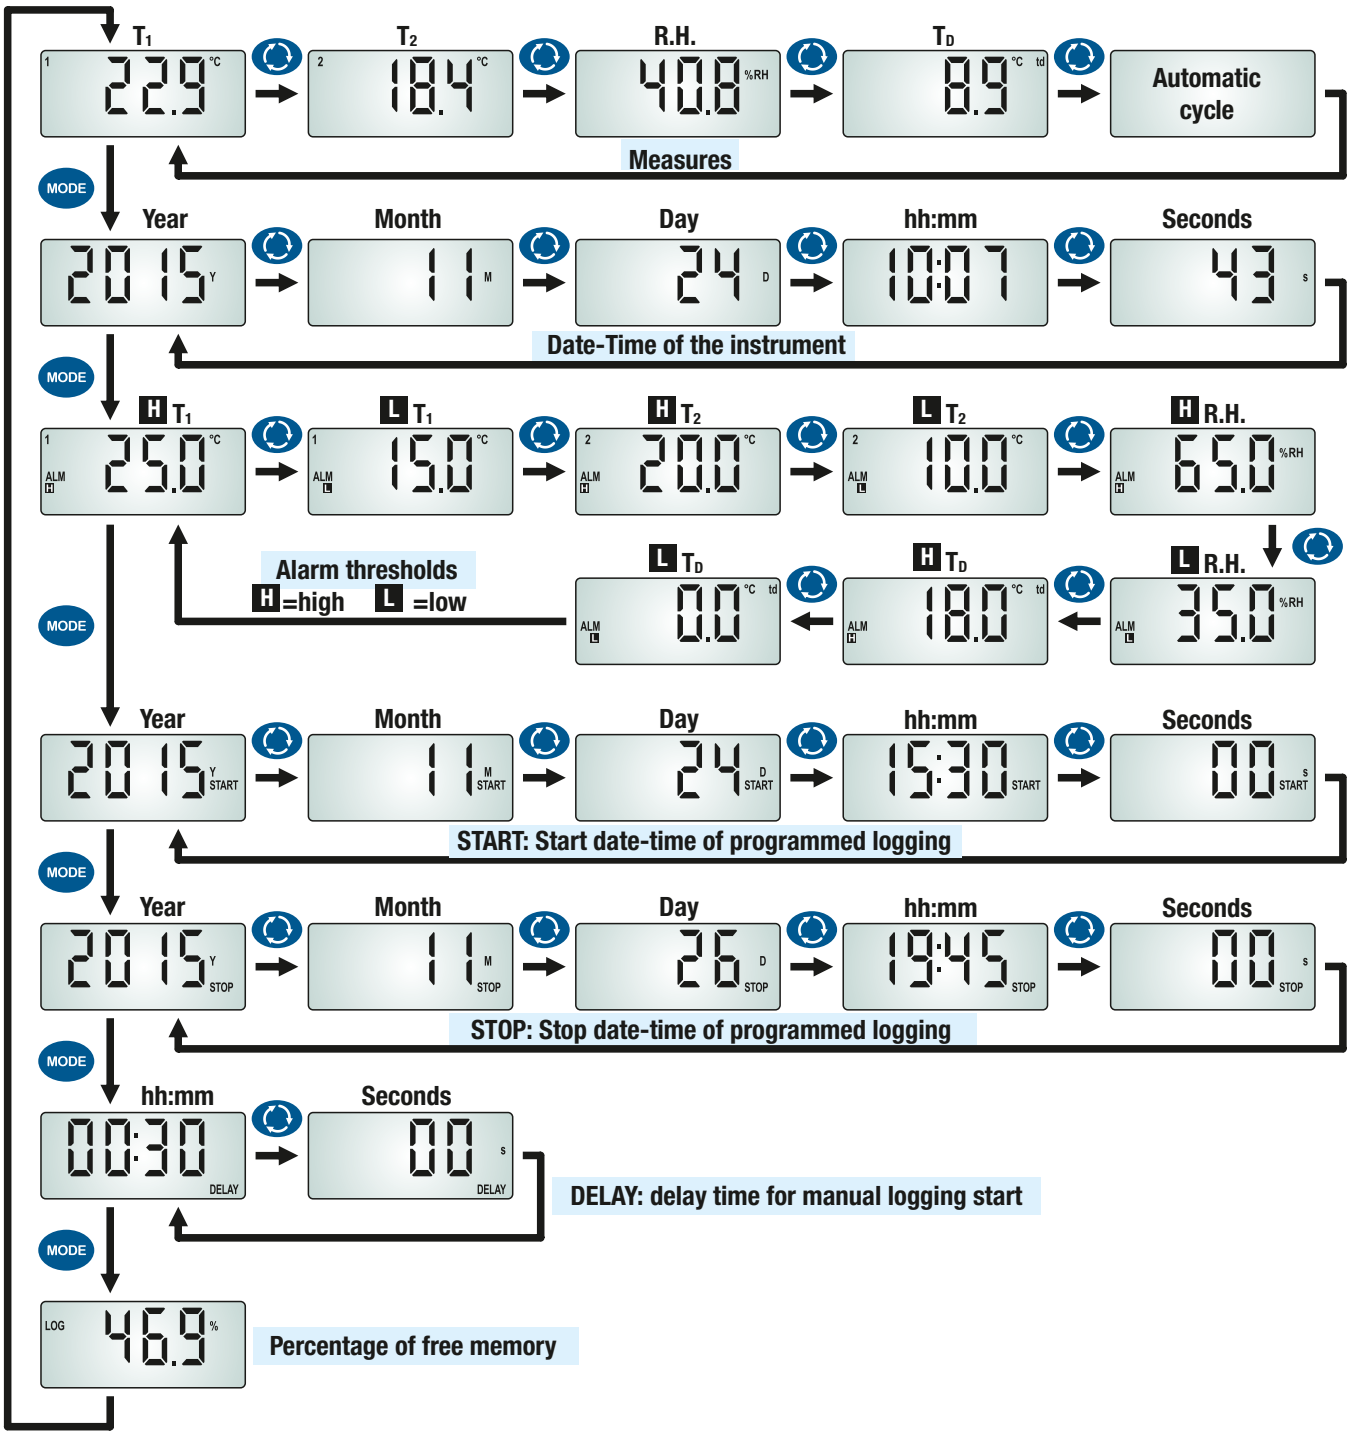

Error messages on display

If a detected quantity is in error, the following indications appear on display:

UFL: the measured value is less than the minimum measurable (Underflow).

OFL: the measured value is greater than the maximum measurable (Overflow).

LOGGING

The start of logging can be:

- **Automatic**, by programming the start date and time.
- **Manual**, by pressing for more than 2 seconds the button START/MODE.
- **Delayed**: logging does not start immediately when you press the START/MODE button, but after the delay time set.

Logging stop can be automatic, by programming the stop date and time or the number of samples to acquire, or manually, by pressing for more than 2 seconds the STOP/ Scroll button.

The programmed time and the delay time are set using the software HD35AP-S.

During logging, the LOG symbol on the display and the LOG LED flash. In case of delayed start, during the delay time the DELAY symbol appears on the display, indicating that the instrument is waiting to start logging.

Alarm 2: temperature > upper threshold

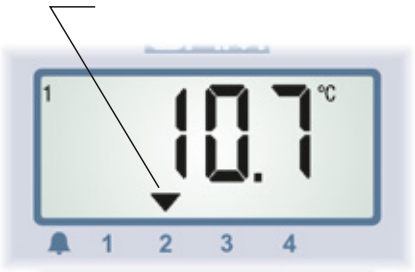

PDF REPORT

At the end of each logging session, the data logger automatically generates a PDF report, which can then be copied to the PC via the USB port of the instrument. When generating the report, the display of the instrument shows ***PdF***.

The report includes the graphs of the detected quantities and information about the logging session: logging start and stop time, logging interval, number of samples acquired, alarm thresholds, minimum, average and maximum of each detected quantity.

The report includes the calculation of the **Mean Kinetic Temperature** (**MKT**). The Mean Kinetic Temperature is an evaluation index of the cold chain used in the pharmaceutical field, and is calculated according to the Haynes equation as a function of all the temperature measurements acquired during the logging session. The Mean Kinetic Temperature is used to evaluate temperature fluctuations experienced by a biological substance during storage or transport, and corresponds to the storage temperature that, if maintained constant, produces on the biological substance the same effects of the actual temperature changes recorded in the time period considered (i.e. the duration of the logging). You can set the value of the activation energy, parameter necessary for the calculation of MKT.

In the graphs are shown in gray the areas of alarm (values that exceed the thresholds set).

The time required to generate the PDF file depends on the amount of data acquired, and can go from a few seconds (if the amount of data acquired is limited) up to about a minute.

DATA REPORT — **TempLogger**

Delta Ohm s.r.l. — **Temperature/RH Logger**

DATA SUMMARY

S.N.:	15037735		**Session Number:**	1	
Recording Start:	2015-11-25 10:49:24		**Recording Stop:**	2015-11-25 11:40:20	
Number of Samples:	3056		**Sampling Interval:**	1 s	
Start reason:	BUTTON PRESS		**Stop Reason:**	BUTTON PRESS	
Calibration date:	2015-11-20		**Calibration used:**	Factory	
CFR Enabled:	NO		**CFR User:**	N/A	
Measure:	TMP1		**MKT:**	MKT1	
Type:	TEMPERATURE		**Value:**	23.5	°C
Max:	25.2	°C	**High Alarm Level:**	27.0	°C
Min:	23.2	°C	**Low Alarm Level:**	5.0	°C
Avg:	23.6	°C	**High Alarm time:**	0	s
High Alarm Level:	30.0	°C	**Low Alarm time:**	0	s
Low Alarm Level:	-10.0	°C			
High Alarm time:	0	s			
Low Alarm time:	0	s			
Measure:	TMP2		**MKT:**	MKT2	
Type:	TEMPERATURE		**Value:**	23.7	°C
Max:	25.4	°C	**High Alarm Level:**	27.0	°C
Min:	23.1	°C	**Low Alarm Level:**	5.0	°C
Avg:	23.5	°C	**High Alarm time:**	0	s
High Alarm Level:	30.0	°C	**Low Alarm time:**	0	s
Low Alarm Level:	-10.0	°C			
High Alarm time:	0	s			
Low Alarm time:	0	s			
Measure:	RH		**Measure:**	DP	
Type:	RH%		**Type:**	DEW POINT	
Max:	74.6	%	**Max:**	19.9	°C
Min:	26.5	%	**Min:**	4.8	°C
Avg:	31.6	%	**Avg:**	6.2	°C
High Alarm Level:	80.0	%	**High Alarm Level:**	80.0	°C
Low Alarm Level:	5.0	%	**Low Alarm Level:**	-10.0	°C
High Alarm time:	0	s	**High Alarm time:**	0	s
Low Alarm time:	0	s	**Low Alarm time:**	0	s

Delta Ohm srl - Via G. Marconi, 5 - 35030 Caselle di Selvazzano (PD) - ITALY
Tel. 0039 0498977150 Fax 0039 049635596 - email: info@deltaohm.com - web: www.deltaohm.com

Example of a PDF report – Summary data

DATA REPORT

Delta Ohm s.r.l.

TempLogger

Temperature/RH Logger

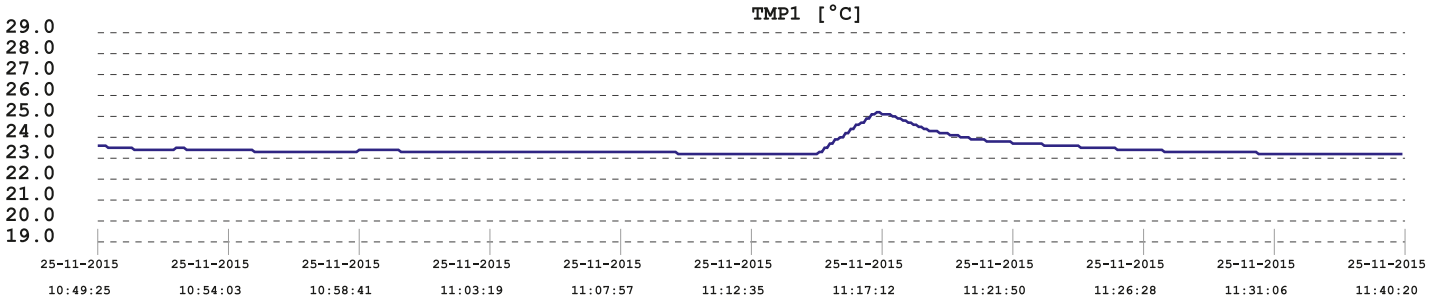

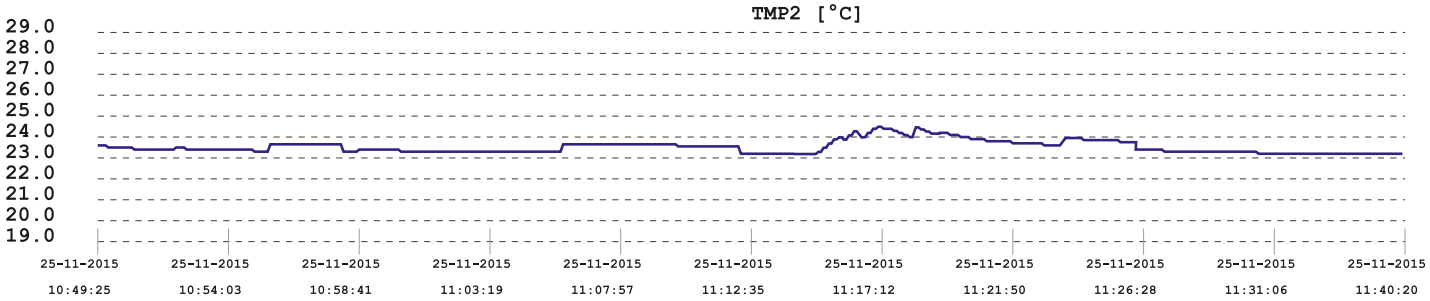

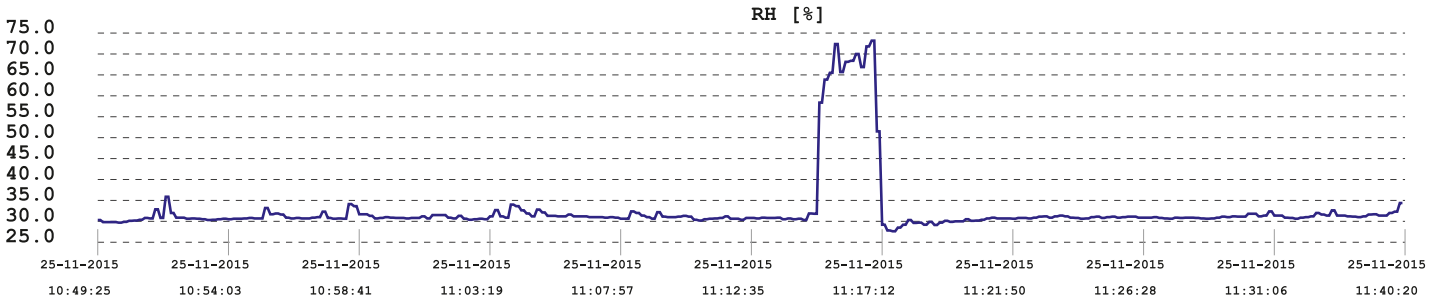

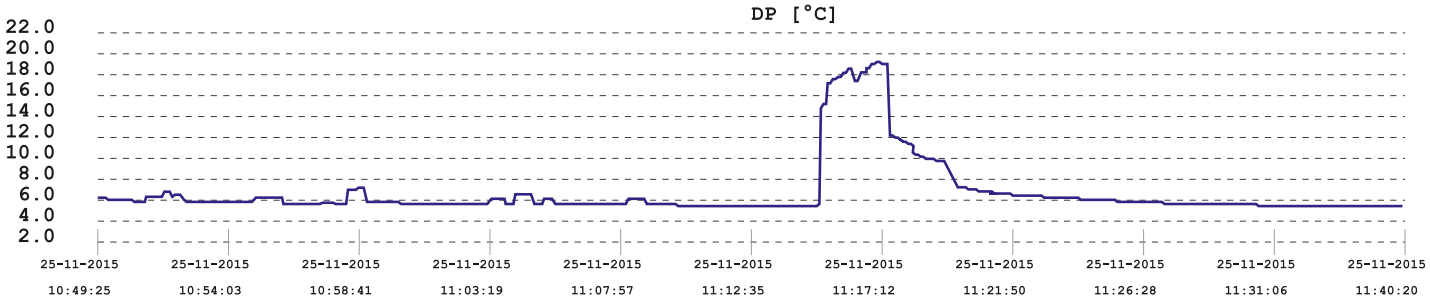

Delta Ohm srl - Via G. Marconi, 5 - 35030 Caselle di Selvazzano (PD) - ITALY
Tel. 0039 0498977150 Fax 0039 049635596 - email: info@deltaohm.com - web: www.deltaohm.com

Example of a PDF report - Graphs

CONNECTION TO THE PC

Pull out the protection of the USB output and connect the instrument to the PC by using the cable **CP23**. If the instrument is **not** logging, the PC detects it as a simple USB flash drive and appears the list of PDF files with the reports of the logging sessions.

In order to transfer data from the internal memory of the instrument in a database in the PC, use the HD35AP-S application software following the on-line instructions of the software.

During logging it is possible to connect through the HD35AP-S software and display the measurements in real time (Monitor), but you cannot copy the PDF files in the instrument.

The connection to the PC does not require any USB driver installation.

In order to disconnect the instrument from the PC, use the "Safely Remove Hardware" function provided by the operating system. When the instrument is not connected to the PC, reposition into place the protective cap of the USB output.

Note: **during PDF report generation at the end of a logging session, the instrument does not respond to the PC; wait for the instrument to finish saving the PDF file**.

CONFIGURATION

All the instrument parameters (date/time, logging parameters, alarm thresholds, quantities to be acquired) are configurable only by connecting the instrument to a PC and using the HD35AP-S application software.

PLUS VERSION

The PLUS version of the logger allows you to activate additional features of the HD35AP-S software, which allow:

- The protection of the recorded data and configuration of the instrument in response to **FDA 21 CFR part 11** recommendations. In particular become available:
  - The traceability of activities (audit trail) performed with the software; for example, which users connected and what changes were possibly made to the configuration of the instrument.
  - The management of users access for the instrument configuration and viewing of data in the database. Each user can be assigned a different password for using the software. There are also three levels of access (Administrator, Super-user and standard User); for each level, the allowed operations can be defined.
  - The protection of the database in which you download the data: you can make sure that data can be downloaded only in a particular database, preventing the downloading of data in different databases.
- The **multi-client** connection to the database: it is possible to store the data in a remote database on the local network to which the PC is connected, and the data can be viewed from any PC on the network via the HD35AP-S software (with the basic version, only the local database of the PC where the software is installed is usable).

In order to enable the additional features of the HD35AP-S software, it is necessary to make the connection with software to a HD208 PLUS version data logger.

If more than a data logger of the series HD208… is available, it is sufficient that only one of them is PLUS version to enable the additional features and use them with the remaining basic version data loggers, which data will be downloaded in the same database used for the PLUS version data logger.

INSTALLATION OF THE INSTRUMENT

The case of the instrument is provided with a hole on the back to fix it to a support (screw or hook) on the wall. Insert the head of the support in the lower part of the hole (width 10 mm) and lower the instrument so that the head of the support remains wedged in the upper part of the hole (width 6 mm). Make sure that the instrument cannot accidentally come out from the support.

BATTERY

The instrument uses a 3.6 V **non-rechargeable** lithium-thionyl chloride (Li-$SOCl_2$) battery AA size. To connect the battery, or to replace a dead battery with a new one, proceed as follows:

1. Unscrew the 4 screws on the back of the case and remove the back cover.
2. In case of replacement, disconnect the battery connector from the circuit board and replace the battery with a new one of the same type.
3. Connect the battery connector to the circuit board, observing the correct polarity. The connector is equipped with a polarization key that prevents the possibility of a wrong insertion of the connector.
4. Close the case by fixing the 4 rear screws.

The battery symbol at the bottom left of the display lights up when the battery is low; in this case, replace the battery as soon as possible.

Internal battery

Temperature probes with NTC10kΩ@ 25 °C sensor

TP35N1… Temperature probe with **NTC10K**Ω sensor. Operating temperature: -20…+75 °C. Accuracy: ± 0.3 °C in the range 0…+70 °C / ± 0.4 °C outside. Dimensions: Ø 5 x 40 mm. AISI 316 stainless steel tube. M12 4-pole female connector.

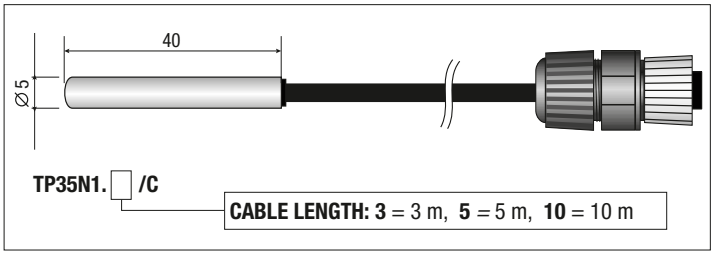

TP35N2… Temperature probe with **NTC10K**Ω sensor. Operating temperature: 0…+75 °C. Accuracy: ± 0.3 °C in the range 0…+70 °C / ± 0.4 °C outside. Dimensions: Ø 6 x 50 mm. AISI 316 stainless steel tube. M12 4-pole female connector.

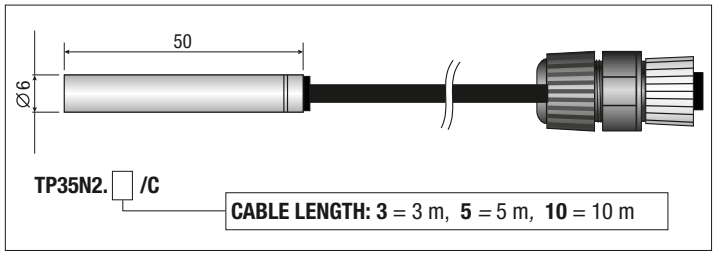

TP35N5… Penetration temperature probe with **NTC10K**Ω sensor. Operating temperature: -20…+105 °C. Accuracy: ± 0.3 °C in the range 0…+70 °C / ± 0.4 °C outside. Dimensions: Ø 4 x 100 mm. AISI 316 stainless steel tube. M12 4-pole female connector.

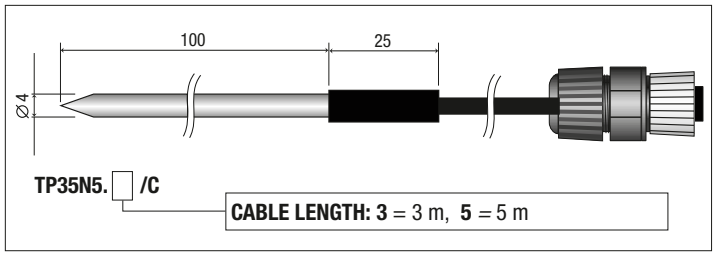

Temperature probes with Pt1000 sensor

TP35.1… Temperature probe with **Pt1000** 1/3 DIN 3-wire sensor. Operating temperature: -50…+105 °C. Dimensions: Ø 5 x 40 mm. AISI 316 stainless steel tube. M12 4-pole female connector.

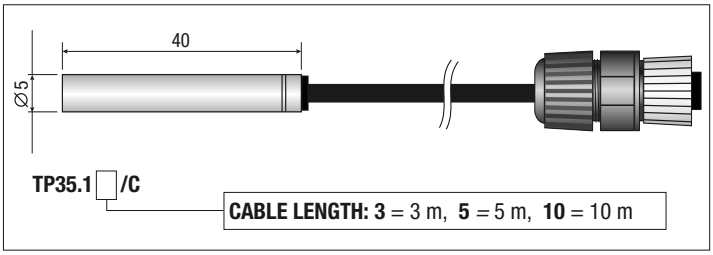

TP35.2… Temperature probe with **Pt1000** 1/3 DIN 3-wire sensor. Operating temperature: 0…+70 °C. Dimensions: Ø 5 x 20 mm. Thermoplastic rubber tube. M12 4-pole female connector.

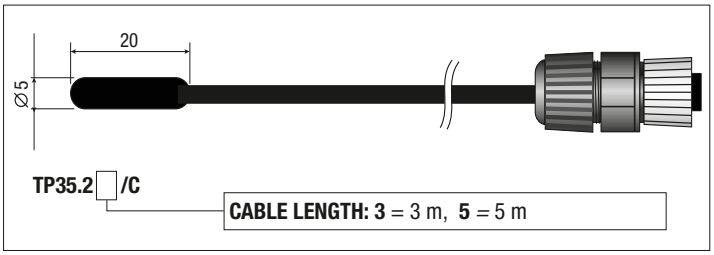

TP35.5… Temperature probe with **Pt1000** 1/3 DIN 3-wire sensor. Operating temperature: -40…+300 °C. Dimensions: Ø 4 x 100 mm. AISI 316 stainless steel tube. M12 4-pole female connector.

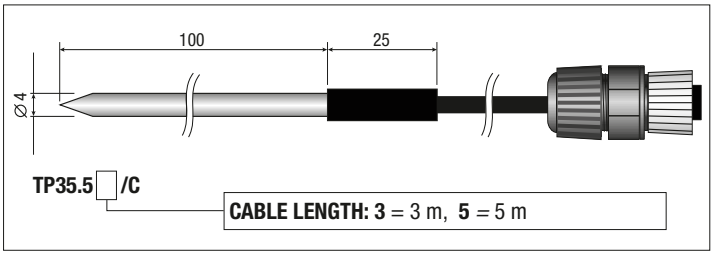

ORDERING CODES

HD208… Datalogger for temperature or temperature/relative humidity and dew point. **Optional LCD Display**. Configurable measurement alarms. USB output. Powered by 3.6 V non-rechargeable lithium-thionyl chloride internal battery (Li-$SOCl_2$). Supplied with: software **HD35AP-S**, battery, user manual. **The USB cable CP23 and the external probe with cable must be ordered separately.**

HD208 □□.□

PROBE TYPE:
No letters = only internal temperature sensor
TC = only external probe with cable
TS = only external fixed temperature probe with stainless steel tube
TV = only external fixed temperature probe with Pocan protective cap and stainless steel grid
TCI = external probe with cable + internal temperature sensor

QUANTITIES MEASURED:
N = temperature with NTC10kΩ sensor
7P = temperature with Pt1000 sensor
1N = temperature (NTC10kΩ sensor) and relative humidity
17P = temperature (Pt1000 sensor) and relative humidity
Options 7P and 17P (Pt1000 sensor) are possible only with external probe with cable.

LCD:
No letters = without LCD, **L** = with LCD

VERSION:
No letters = basic, **P** = PLUS

Temperature and relative humidity combined probes

HP3517… Temperature and relative humidity combined probe. R.H. sensor measuring range: 0…100%. Temperature sensor: NTC10kΩ @ 25 °C (HD3517TC…) or Pt1000 (HP3517**E2**TC…). NTC10KΩ sensor measuring range: -40…+105 °C. Pt1000 sensor measuring range: -40…+150 °C. R.H. sensor operating temperature: -40…+80 °C standard, -40…+150 °C with **E2 option**. M12 4-pole female connector. Pocan® plastic body.

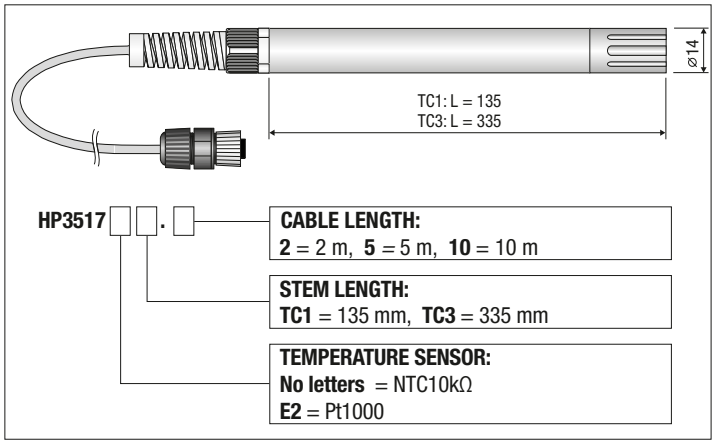

Accessories

HD35AP-S Additional copy of the CD-ROM with HD35AP-S software for the configuration of the instrument, the monitoring and downloading of data in the database. For Windows® operating systems.

CP23 Direct USB connection cable with mini-USB male connector on the instrument side and USB type A male connector on the PC side.

HD35-BAT2 3.6 V **non-rechargeable** lithium-thionyl chloride (Li-$SOCl_2$) battery, size AA, 2-pin Molex 5264 connector.

HD75 Saturated solution for testing the Relative Humidity probes at 75% RH, supplied with adapter for probes diameter 14 mm thread M12×1.

HD33 Saturated solution for testing the Relative Humidity probes at 33% RH, supplied with adapter for probes diameter 14 mm thread M12×1.

MANUFACTURE OF PORTABLE, BENCH TOP AND PROCESS SCIENTIFIC INSTRUMENTS
Current and voltage loop transmitters and regulators
Temperature - Humidity, Dew point - Pressure - CO, CO_2
Air speed - Light - Optical Radiation
Acoustics - Vibration
Data logger - Data logger wireless
Microclimate
pH - Conductivity - Dissolved Oxygen - Turbidity
Elements for weather stations

ACCREDIA
L'ENTE ITALIANO DI ACCREDITAMENTO

LAT N° 124 Signatory of EA, IAF and ILAC Mutual Recognition Agreements
Temperature - Humidity - Pressure - Air speed
Photometry/Radiometry - Acoustics

CE CONFORMITY
- **Safety:** EN61000-4-2, EN61010-1 Level 3
- **Electrostatic discharge:** EN61000-4-2 Level 3
- **Electric fast transients:** EN61000-4-4 Level 3, EN61000-4-5 Level 3
- **Voltage variations:** EN61000-4-11
- **Electromagnetic interference susceptibility:** IEC1000-4-3
- **Electromagnetic interference emission:** EN55022 class B

RoHS 2002/95/EC

Delta Ohm srl
Via G. Marconi, 5
35030 Caselle di Selvazzano (PD) - Italy
Tel. 0039 0498977150 r.a.
Fax 0039 049635596
e-mail: info@deltaohm.com
Web Site: www.deltaohm.com

Made in Italy

01
12.15